

# Lyofast MWO 030


**Description** Lyofast MWO 030 consists of specifically selected strains of *Lactococcus lactis* ssp. *lactis* and *Lactococcus lactis* ssp. *cremoris* to ensure a uniform and controlled production of fresh cheese, soft cheese, semi-hard cheese, and hard cheese.

**Application** Sprinkle the culture powder directly into process milk under aseptic conditions ensuring that the culture is well dispersed by gentle stirring. The following may be used as inoculation guidelines:

Product	UC/100 l	Product	UC/100 l
Fresh cheese	0.5-2.0	Soft cheese	0.7-2.0
Cottage cheese	1.0-10.0	Semi-hard cheese	1.0-2.0
Hard cheese	1.5-2.5		

**Rotation** The recommended rotations are Lyofast MWO 031/MWO 032/MWO 033.

**Acidification information** Standardised laboratory acidification test is conducted in milk powder, reconstituted at 9%, at defined temperature.  
Acidification profile: inoculation level corresponding to 1 UC per 100 litres milk.  
Standard activity: expressed as temperature/time/pH relations: 32°C/6.5 hours/pH 5.4 ± 0.1.

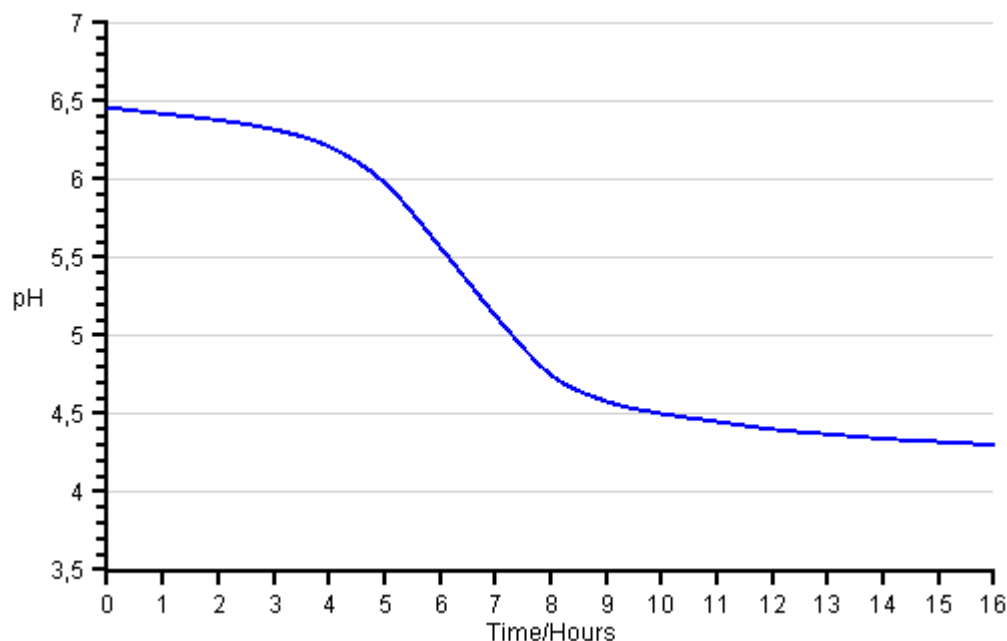

**Culture information** Data are obtained under standardised laboratory conditions, and consequently, should be considered as guidelines.

Optimal temperature for growth	22-34 °C	Scalding temperature	Max. 43°C
Acidification capability	pH 4.3		

**Storage** Unopened pouches should be kept below -17°C.

# Lyofast MWO 030

<b>Package data</b>	The freeze-dried culture is packed in waterproof and airproof aluminium pouches. The packaging material is food grade. Lyofast MWO 030 is available in 10 and 50 UC.		
<b>Shelf life</b>	18 months when stored below -17°C.		
<b>Heavy metal specification</b>	Pb (lead)	< 1 ppm	
	Hg (mercury)	< 0.03 ppm	
	Cd (cadmium)	< 0.1 ppm	
	* Analysed on regular basis.		
<b>Microbiological specification</b>	<i>Bacillus cereus</i>	<100 CFU/g	Method: Sacco M10 (1)
	Coagulase positive staphylococci*	<10 CFU/g	Method: Sacco M11(2)
	Enterobacteriaceae	<10 CFU/g	Method: Sacco M2 (3)
	<i>Escherichia coli</i>	<1 CFU/g	Method: Sacco M27 (4)
	<i>Listeria monocytogenes</i> *	Not detected in 25 g	Method: Sacco M13 (5)
	Moulds & yeasts	<10 CFU/g	Method: Sacco M3 (6)
	<i>Salmonella spp</i> *	Not detected in 25 g	Method: Sacco M12 (7)
	* Analysed on regular basis. All analytical methods are available upon request. (1)ISO 7932; (2)ISO 6888-1-2; (3)ISO 21528-1-2; (4)ISO11866-1-2/IDF 170-1-2; (5)ISO 11290-1-2; (6)ISO 6611/IDF 94; (7)ISO 6785/IDF 93.		
<b>GMO</b>	The microbial strains are not genetically modified (GMO) in accordance with the European Directive 2001/18/CE. The strains are isolated from natural sources. The raw materials used are also GMO free in accordance with Regulation (EC) No. 1829/2003, and Regulation (EC) No. 1830/2003. Statement available upon request.		
<b>Allergens</b>	The raw materials used are generally based on dairy ingredients. All materials are free of the following components and their derivatives: peanut, tree nut, sesame, egg, fish, shellfish, mollusc, crustacean, sulphite, cereals containing gluten, celery, mustard, soy and lupine. Statement available upon request.		
<b>Safety information</b>	Material Safety Data Sheet available on <a href="http://www.saccosrl.it">www.saccosrl.it</a>		
<b>Certificate</b>	Lot certificate available upon request.		
<b>ISO Kosher approval</b>	Sacco S.r.l. is UNI EN ISO 9001:2008 certified since 1998, ISO 22000:2005 and FSSC 22000 certified since 2014. Sacco cultures are generally Kosher approved except for surface ripening cultures.		
<b>Service</b>	Please contact your distributor for guidance and instructions for your choice of culture and processing. Information about additional package sizes and sales units is also available upon request.		
<b>Liability</b>	This information is based on our knowledge trustworthy and presented in good faith. No guarantee against patent infringement is implied or inferred.		